

ACT·LABS™
everything else is just a toy



Act Labs
RS/GPL Shifter
Disassembly
Guide

1) Remove these two screws




**2) Remove these 4 screws
(two on each side)**




3) Remove glue

4) Slide spring outwards

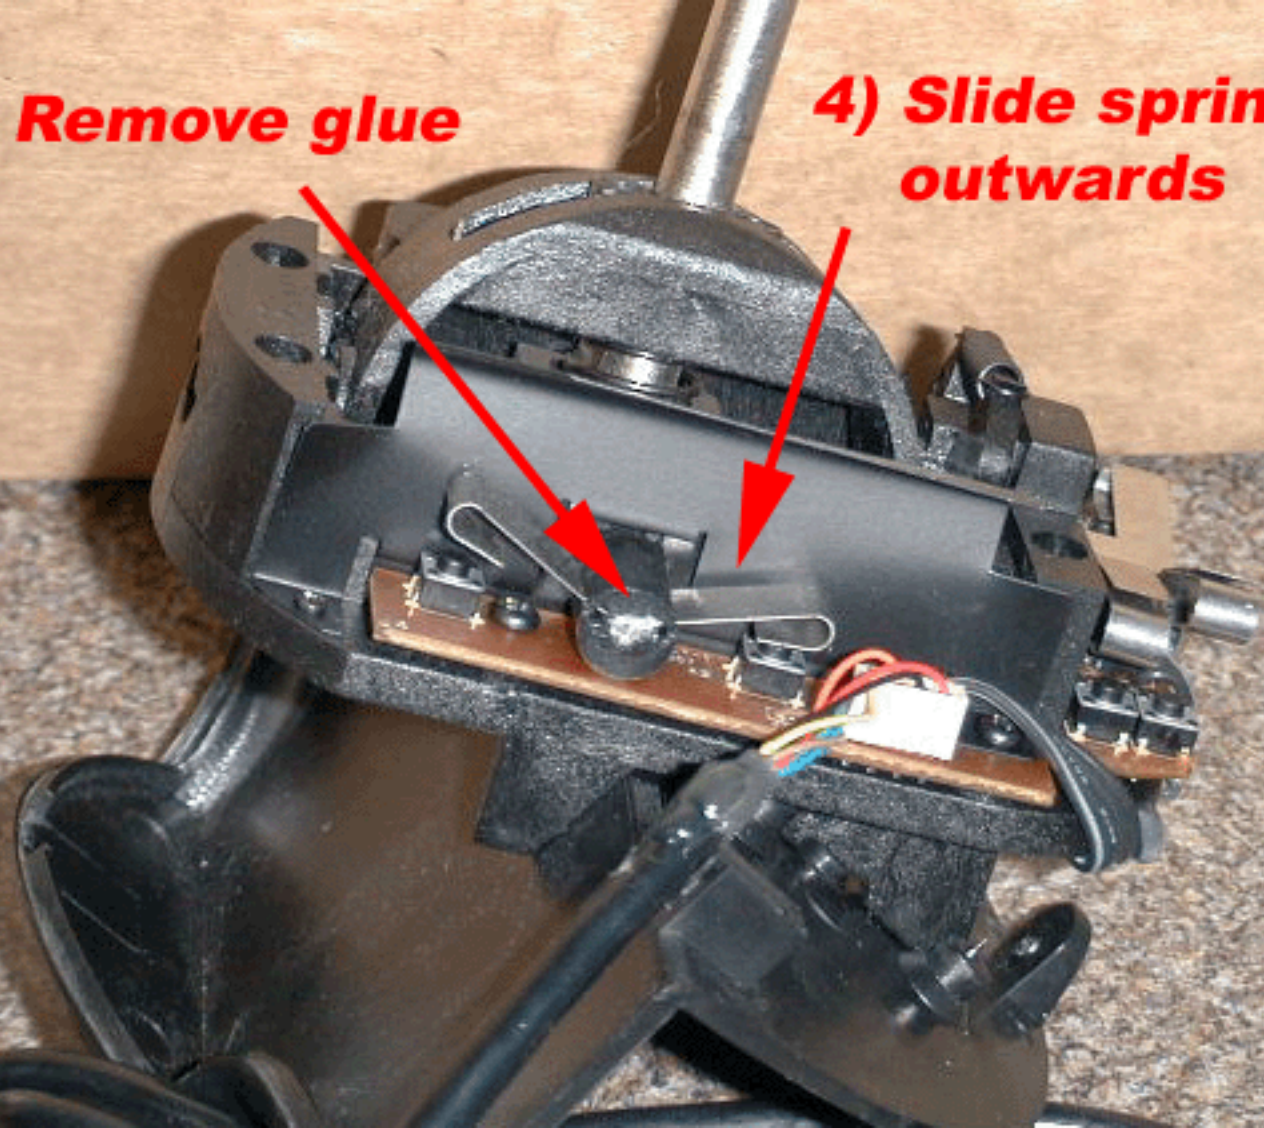

**6) Slide springs
outwards**

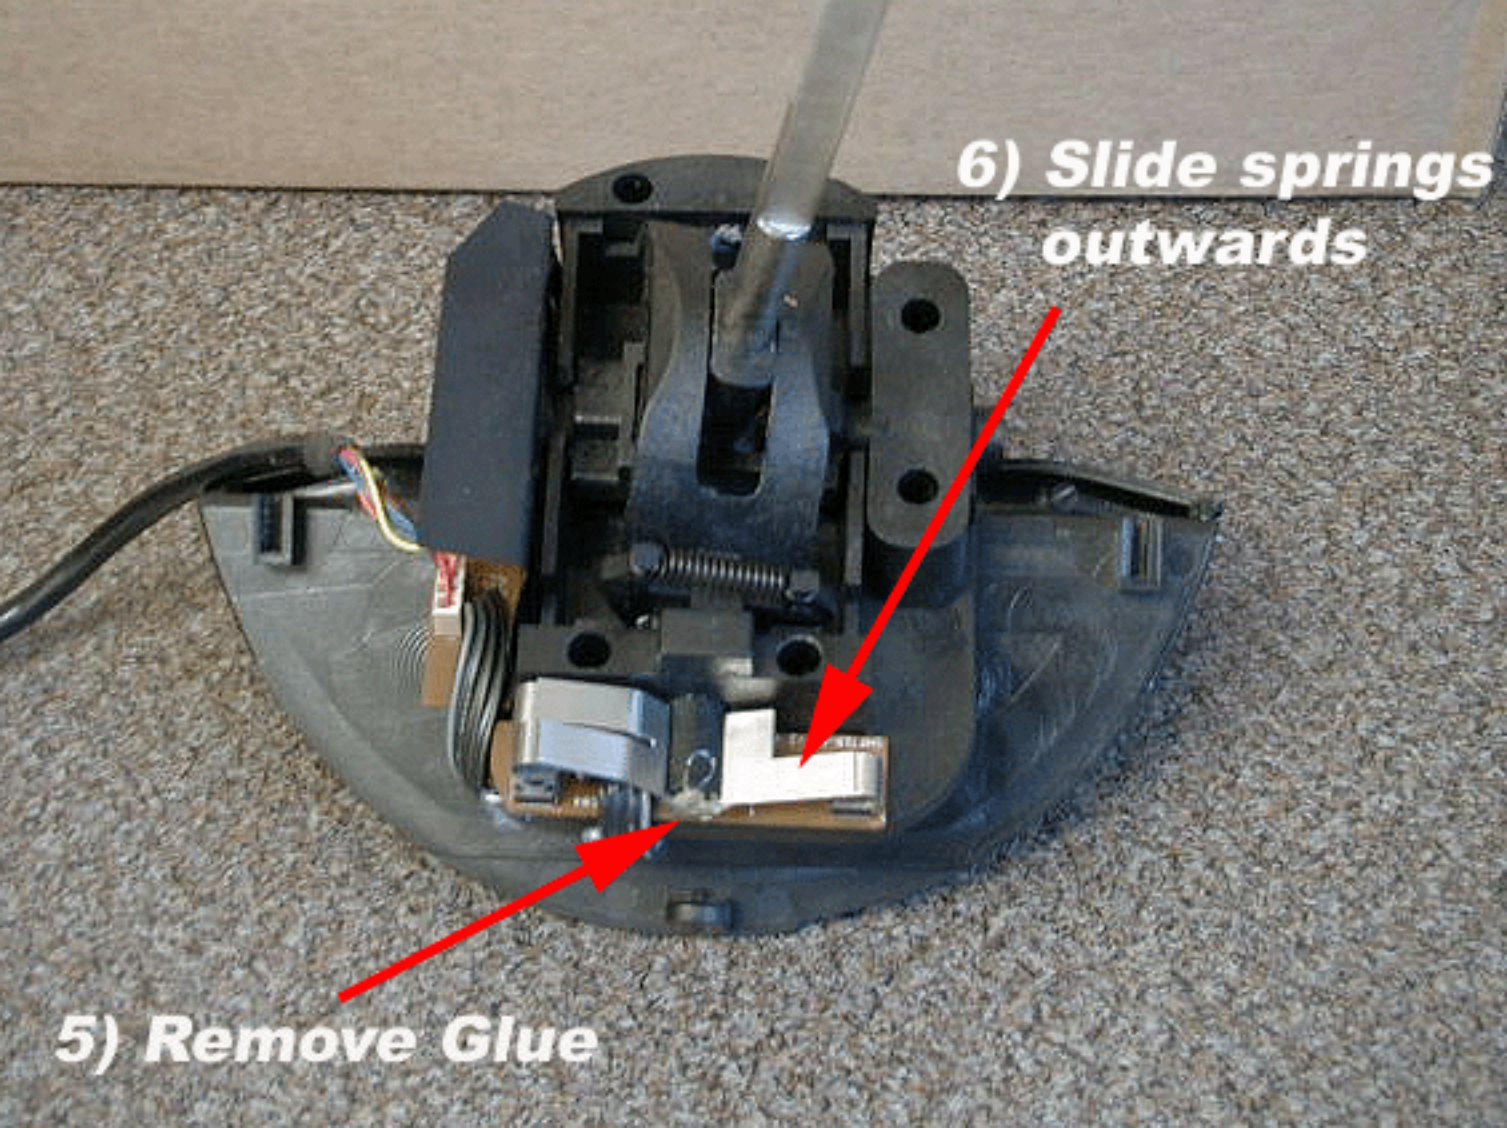

5) Remove Glue

7) Replace worn springs with new ones. Apply hot glue on the end of the spring shaft to secure.

On the large spring set, place the flat spring on top of the curved spring and replace on shaft. Apply hot glue where indicated.

175680
N/S

5000000000

