


ACT·LABS™
everything else is just a toy




Act Labs RS
Disassembly
Guide

- 1) Remove the screws indicated by the red arrows
- 2) Remove the potentiometer (yellow arrow)

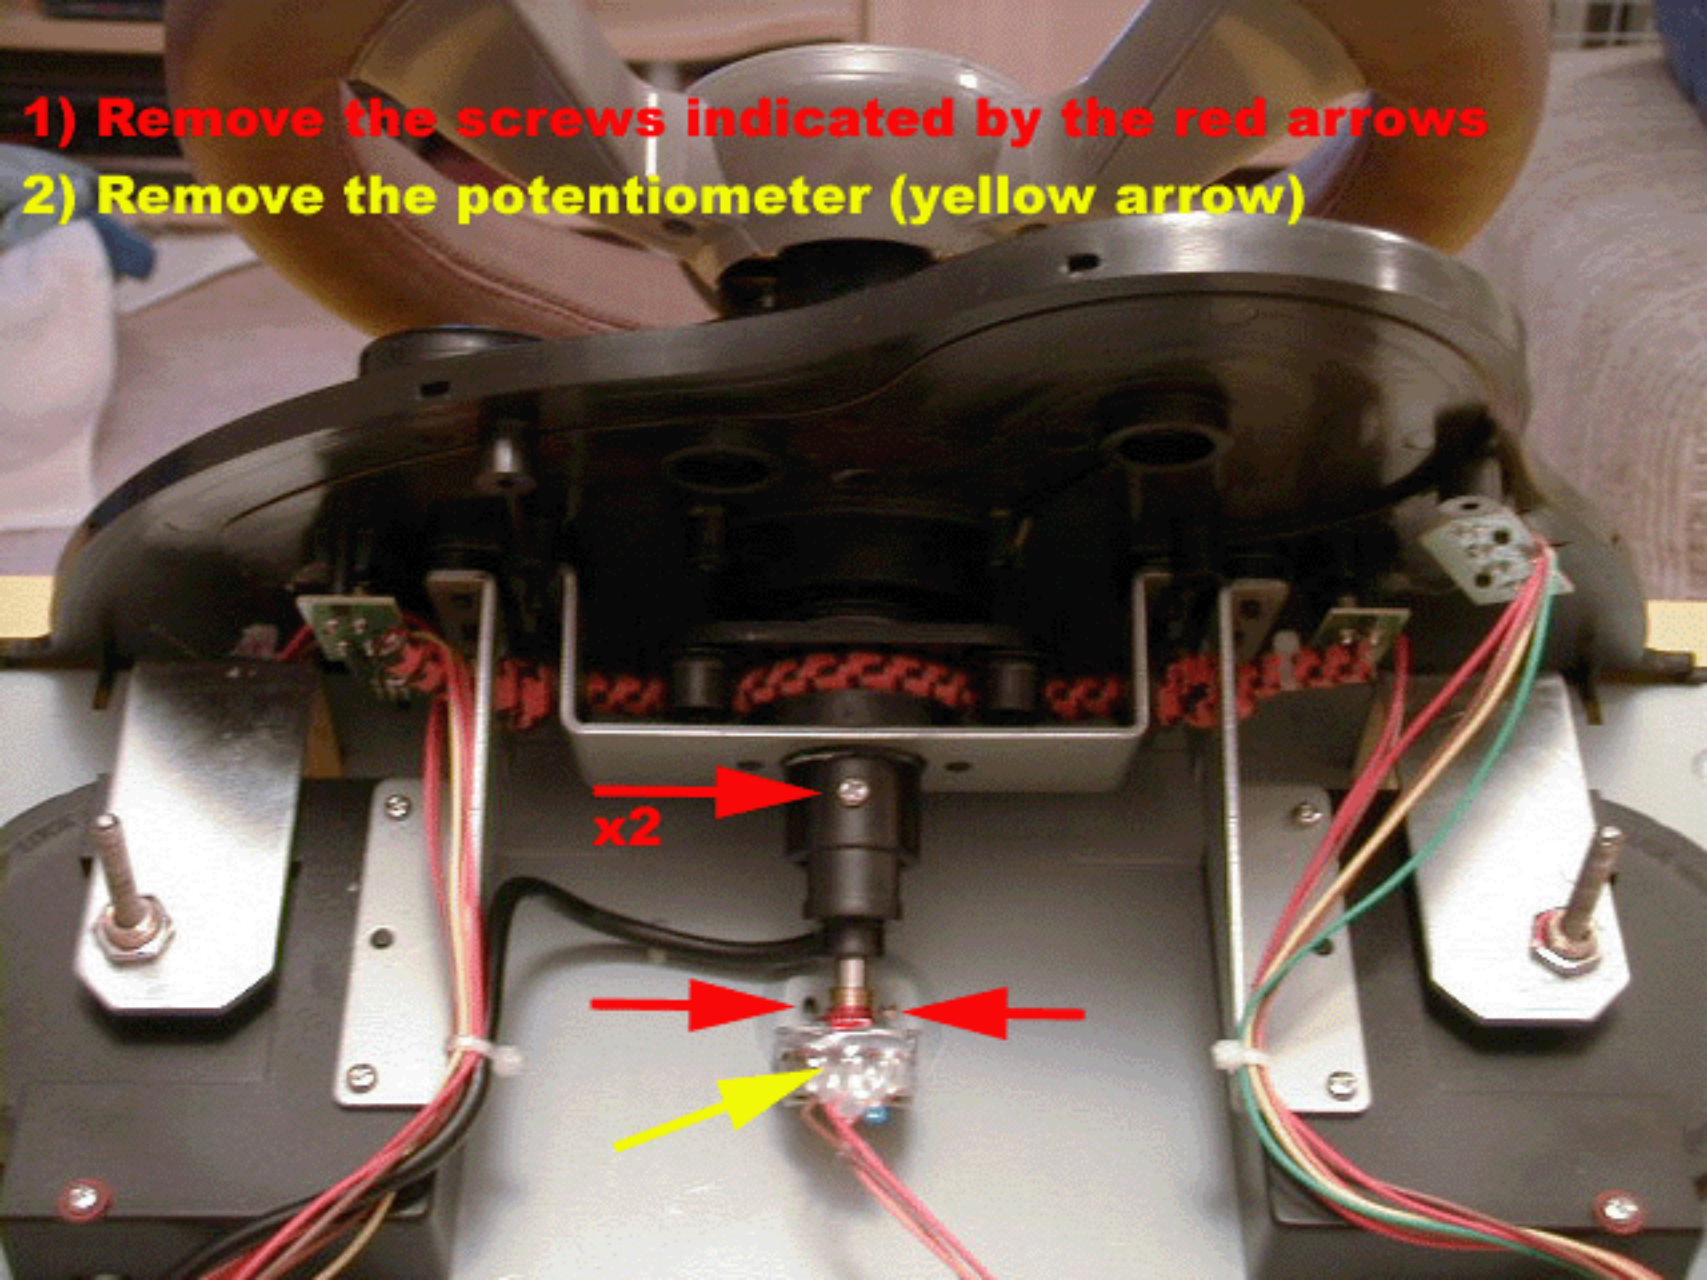

3) Remove the collar hub from the main shaft

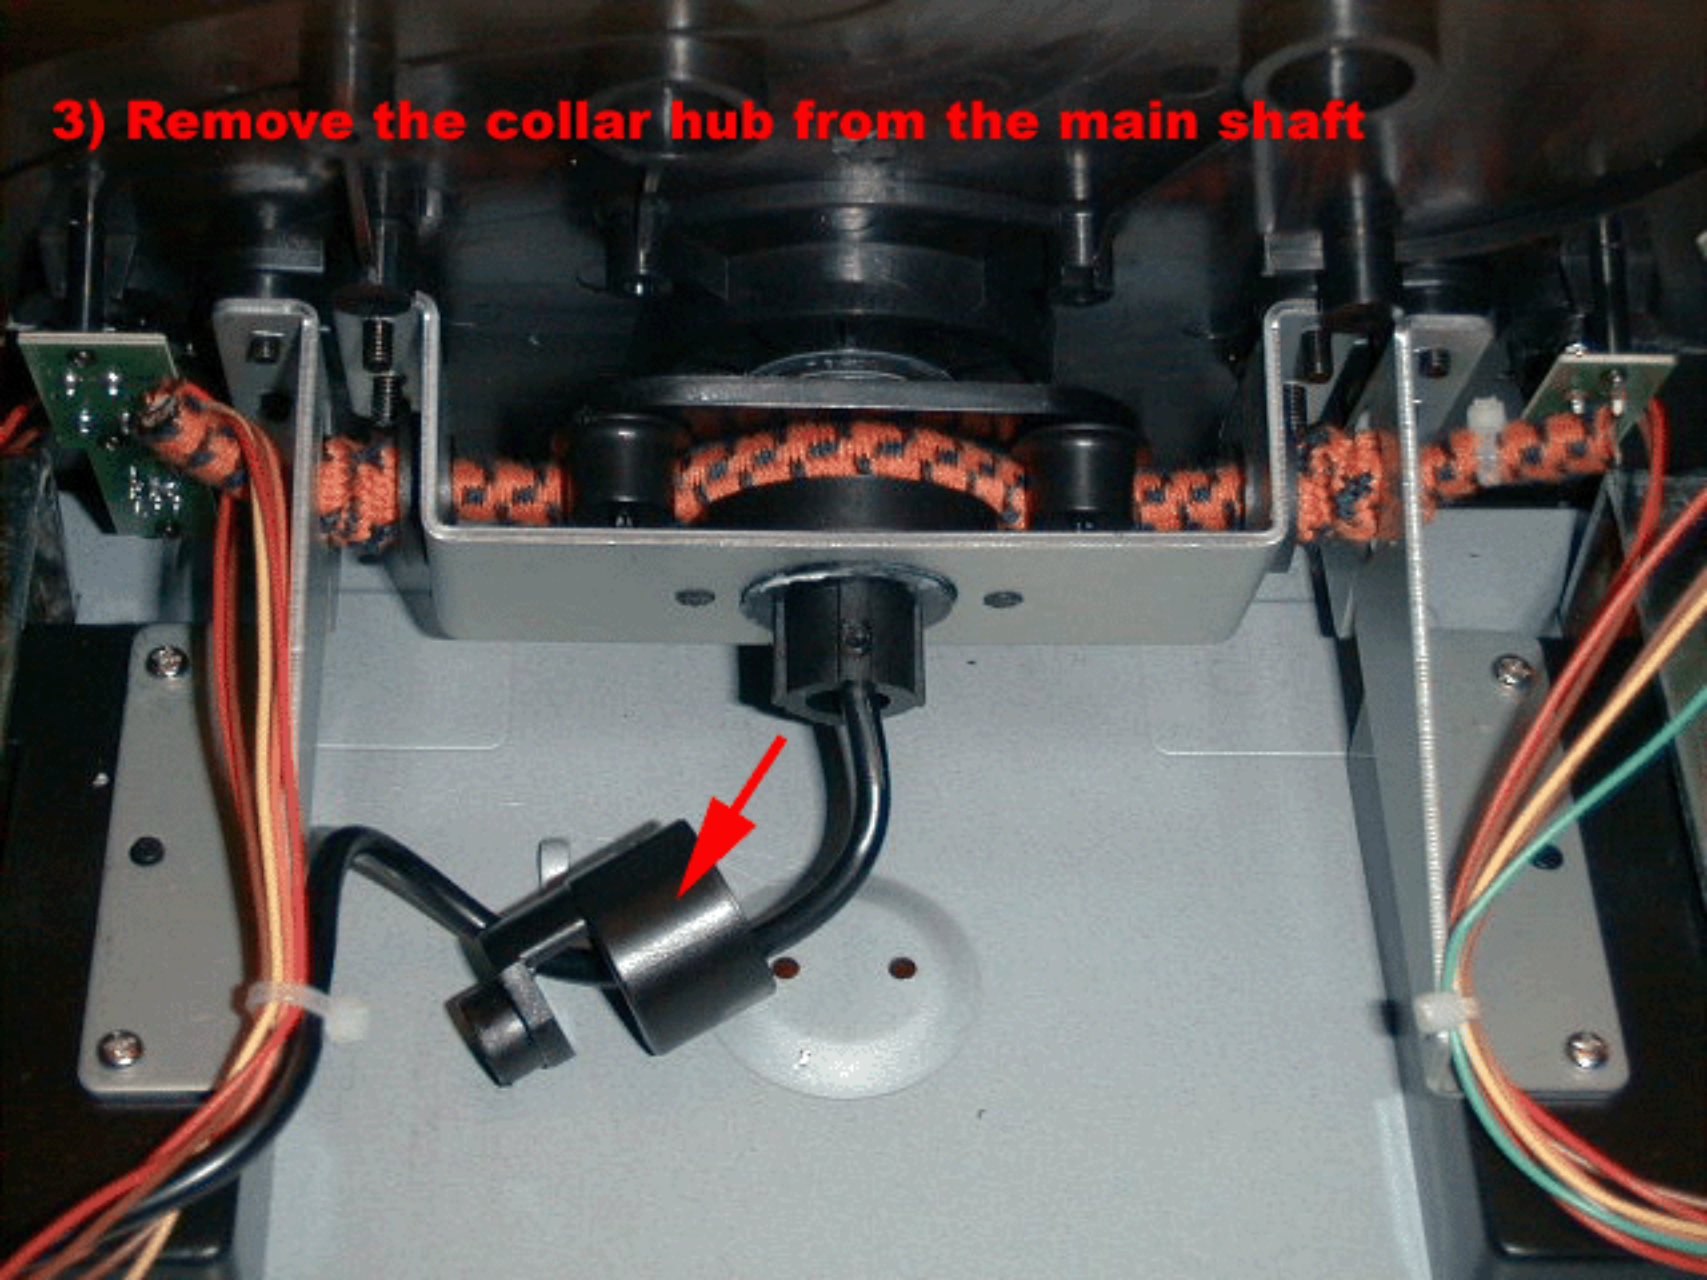


4) Peel back the silver dashboard decal and remove the screws indicated. There are 4 screws on each side of the wheel. Only the Right side is shown here.




DO NOT remove the outer screws.


5) Remove the retaining screw on both sides of the bungie mount

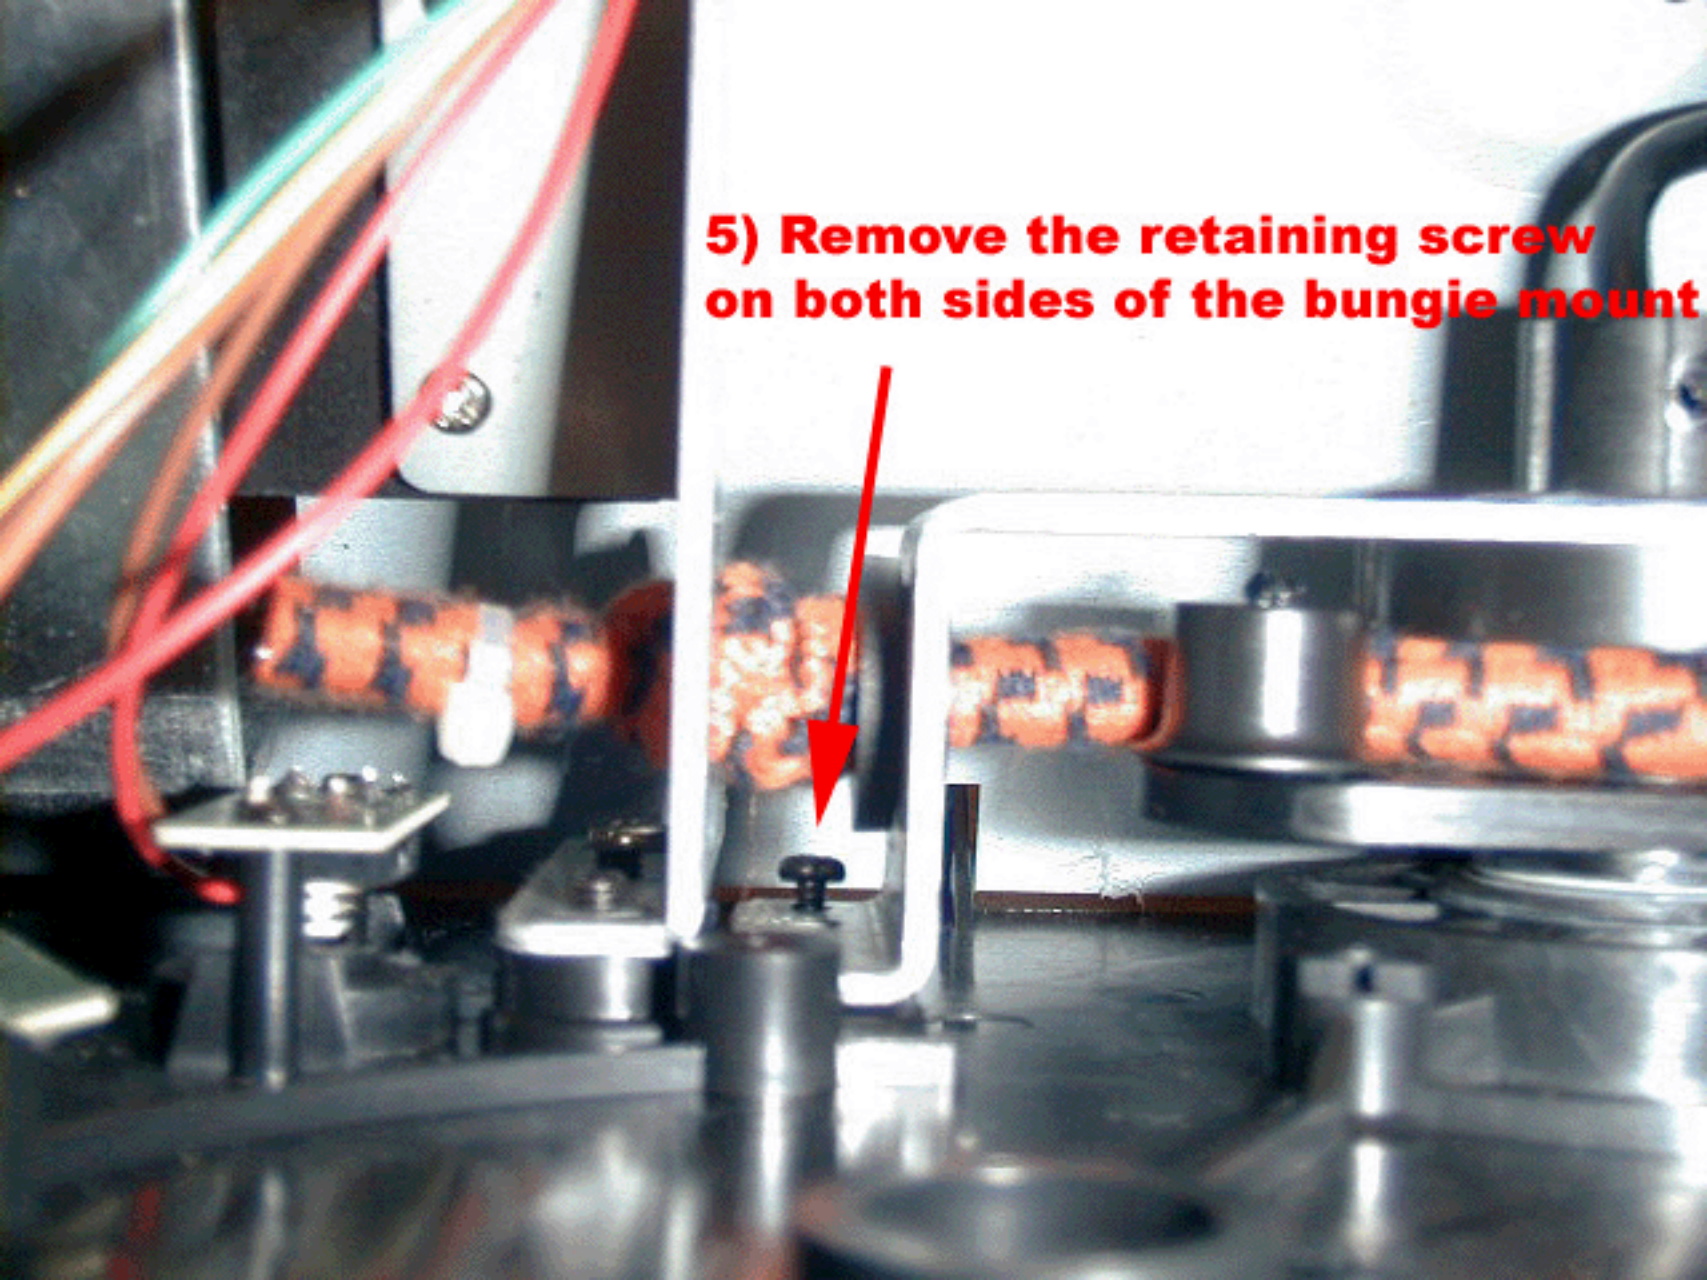

6) Remove the bungie mount from the main shaft.
Original bungie orientation shown in ORANGE

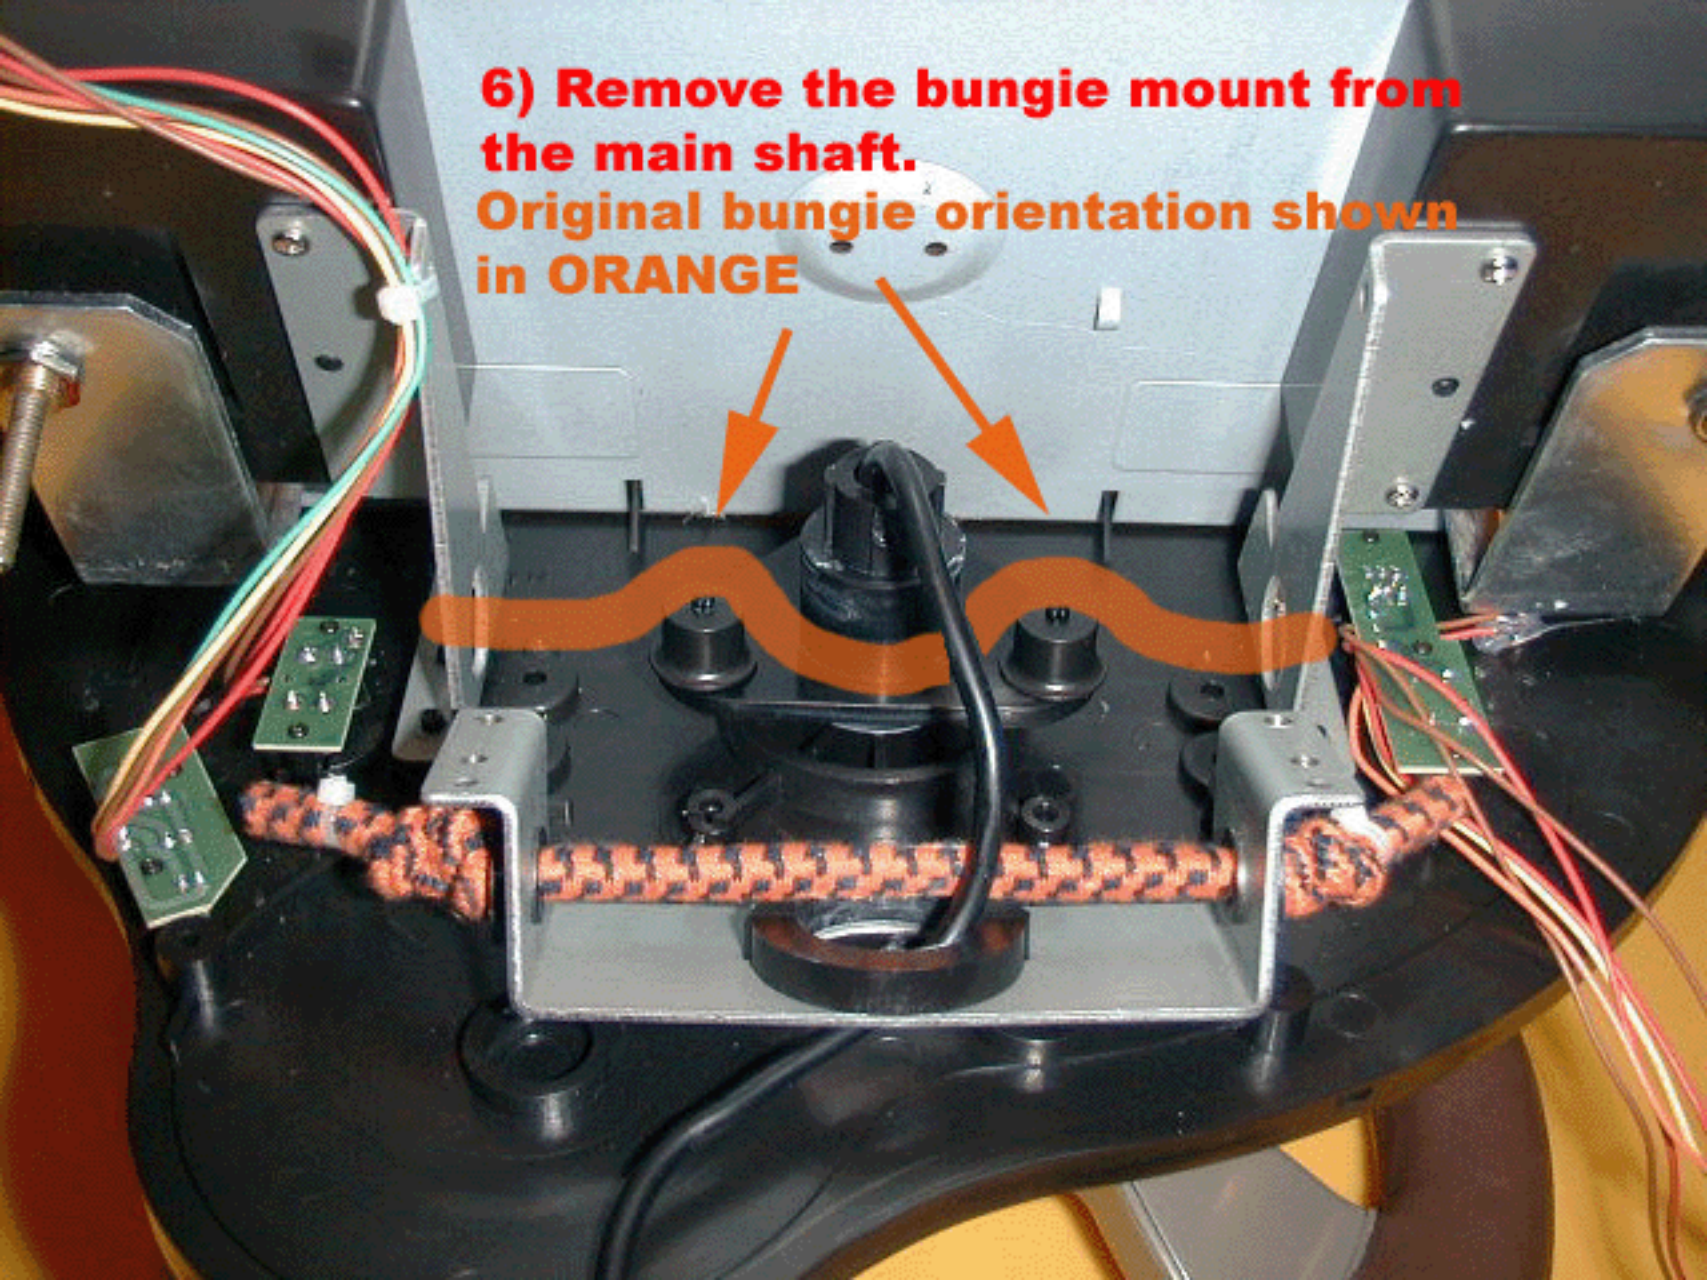

7) Remove plastic stopper

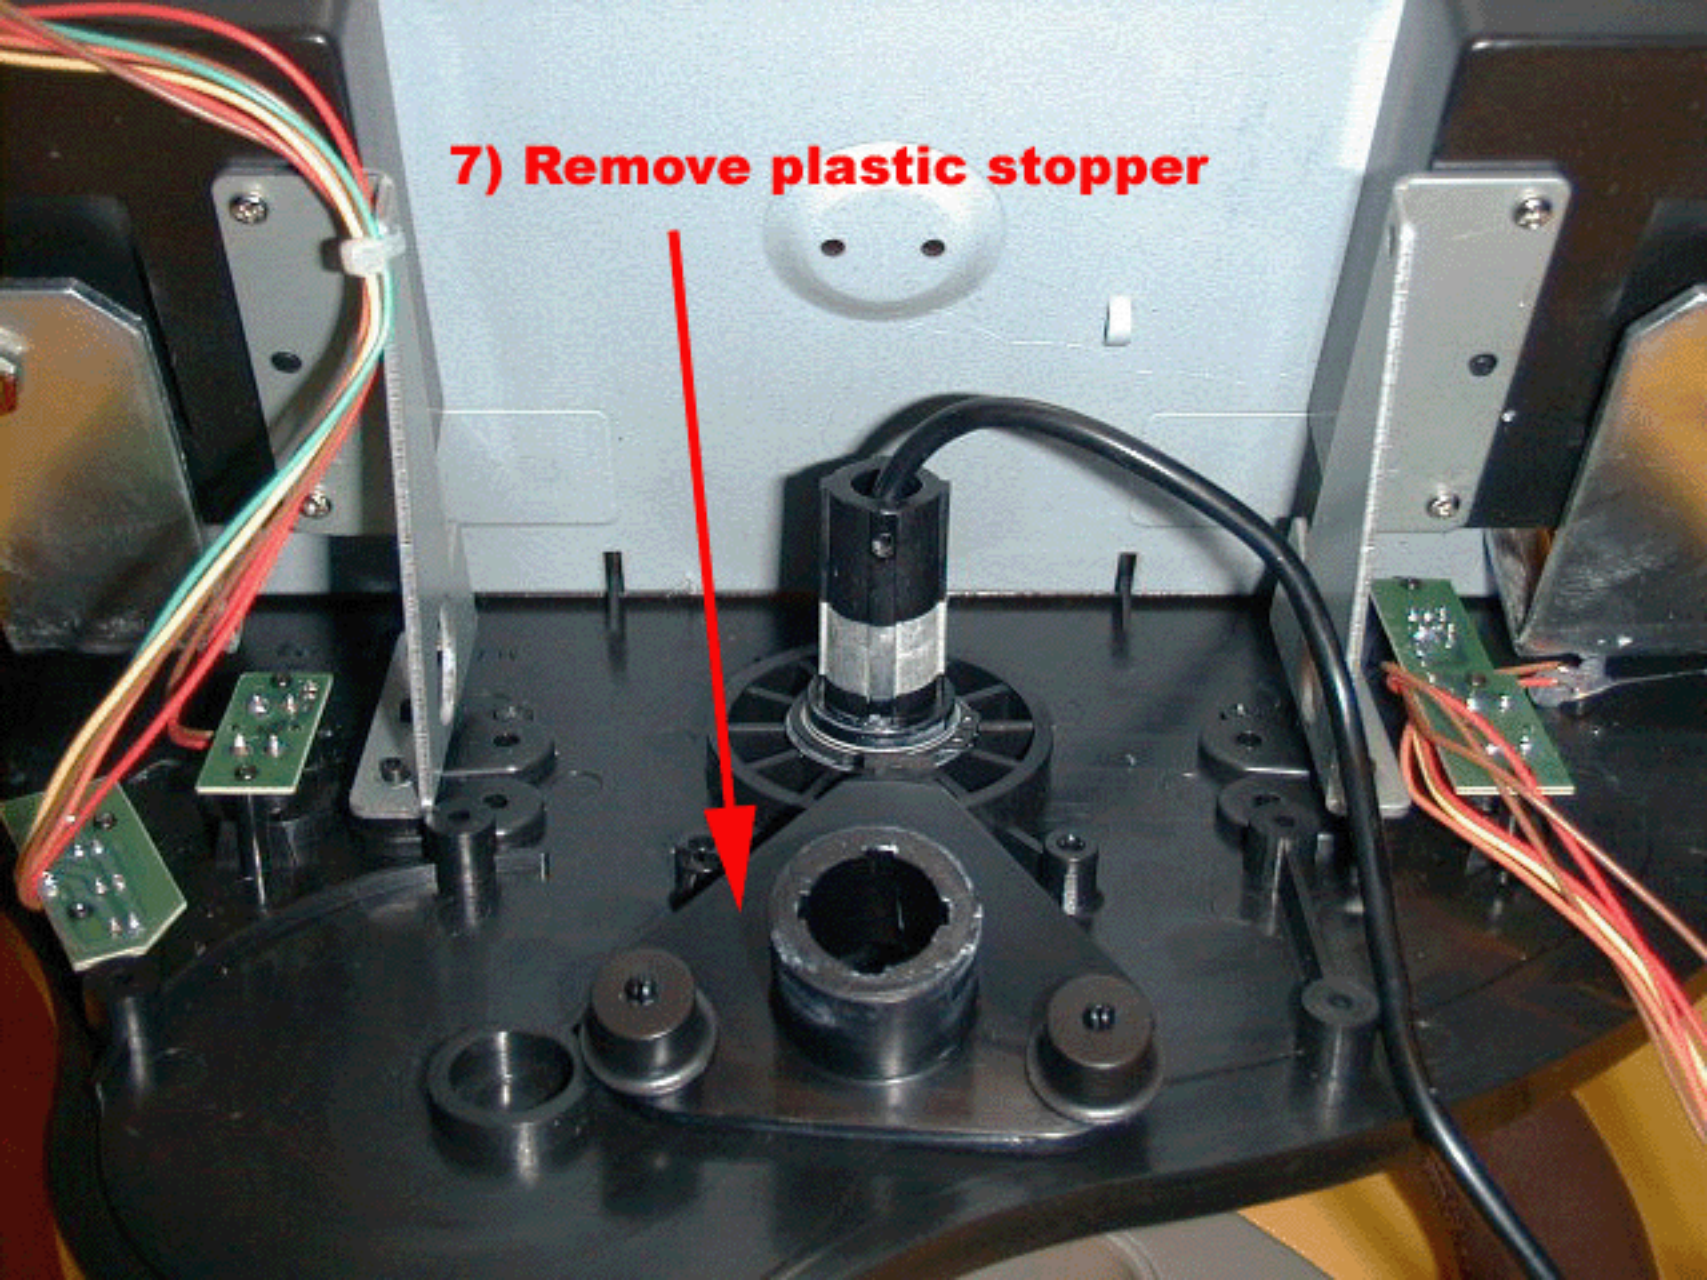

8) Use Ring Pliers to remove the shaft ring



9) Separate the Dashboard from the wheel shaft

